

# QUICKPLAY

## KICKSTER COMBO



## INSTRUCTIONS

The Kickster Combo goal is a portable product and has been designed to be put up and taken down quickly and easily. It should not be left up after use. To ensure maximum product lifespan of your Kickster Combo goal please ensure to pack it away and store the product in a dry place.

### WARNINGS:

Please read this page carefully to get the best from your new goal.

1. **Must be assembled by an adult.**
2. **This product is not suitable for children under 3 years of age.**
3. **Only use on a flat surface.**
4. **Check the product is fully assembled before use.**
5. **Check the frame is secured to the ground before use.**
6. **Disassemble after use. Do not leave outdoors in adverse weather conditions.**
7. **If Combo goal gets wet after use, ensure that it is properly dried before storage.**
8. **Do not climb on the Skill set.**
9. **Regularly check the goal for wear and tear. Stop using if any part of it breaks. Failure to do this may result in injury.**
10. **Keep away from heat sources. Do not leave in a hot vehicle.**
11. **Not suitable for use in high winds.**

### YEARS PARTS WARRANTY:

This product must be disassembled after use and stored in a cool, dry place or the warranty is invalidated. Register your warranty within 15 days of purchase visit: [Warranty.QuickPlaySport.com](http://Warranty.QuickPlaySport.com) or scan this code:




## SETTING UP YOUR REBOUNDER


- 1 **STEP A:** CONNECT PRE-ATTACHED BASE FRAME.  
**STEP B:** CONNECT PRE-ATTACHED FRONT FRAME.  
ONCE YOU HAVE COMPLETED STEP A AND B, CONNECT THE FRONT FRAME TO BASE FRAME.



- 2 **STEP C:** CONNECT STEEL UPRIGHT TO THE CORNER JOINTS  
**STEP D:** CONNECT LARGE UPRIGHT TO THE STEEL UPRIGHT  
IF YOU ARE CHANGING FROM GOAL TO REBOUNDER, YOU MUST REMOVE THE MINI UPRIGHT.

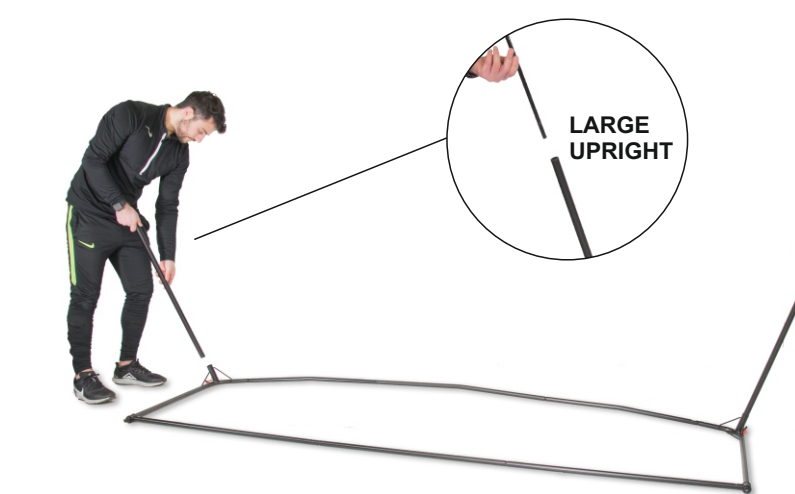


- 3 **STEP E:** ATTACH NET LOOP TO TOP OF UPRIGHT  
**STEP F:** ATTACH NET TO BASE FRAME HOOK

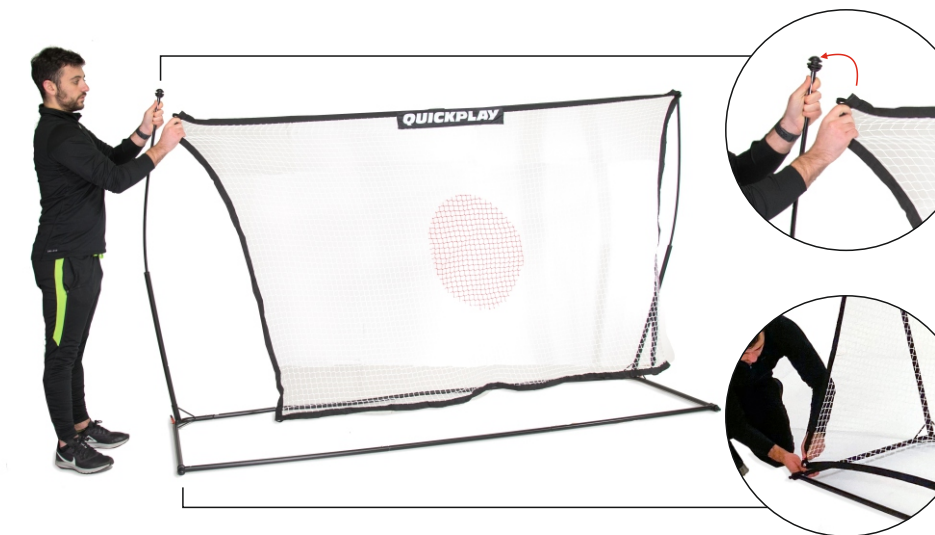


- 4 **STEP G:** ATTACH BUNGIES IN PLACES SHOWN BELOW



- 3 **STEP D:** ATTACH NET LOOP TO TOP OF UPRIGHT  
**STEP E:** ATTACH NET TO BASE FRAME HOOK

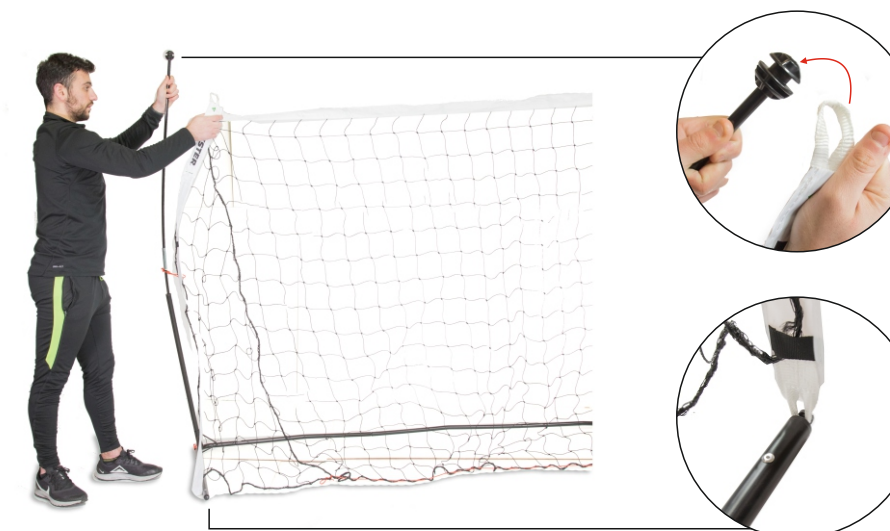

- 4 **STEP F:** ATTACH BUNGIES IN PLACES SHOWN BELOW

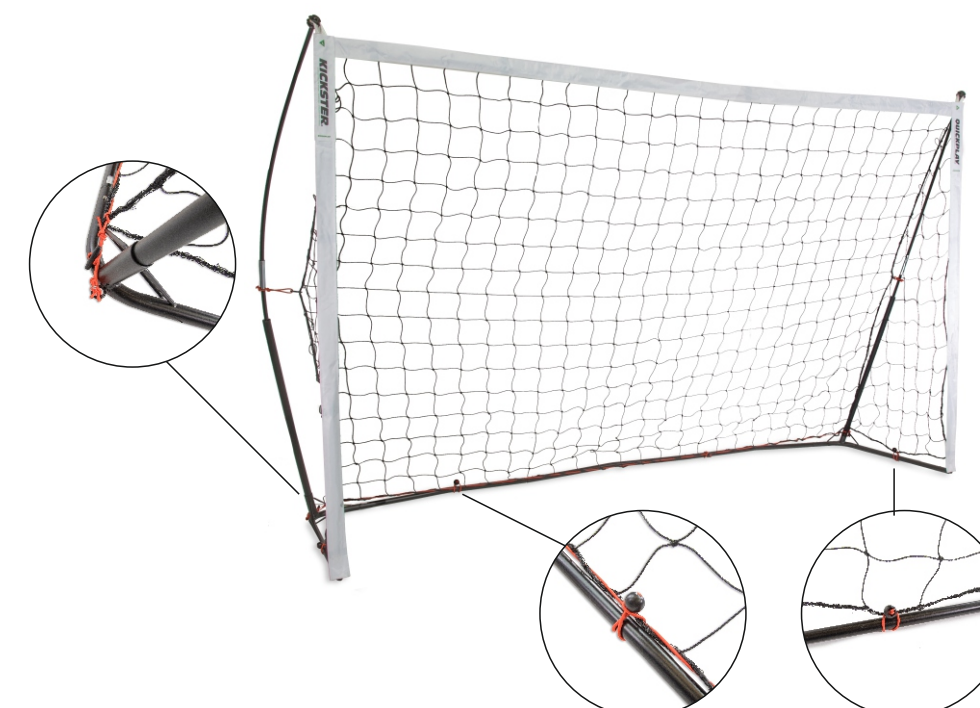

## PACK CONTAINS

KICKSTER NET X1



REBOUNDER NET X1



FRONT  
FRAME  
X1



LARGE  
UPRIGHTS  
X2



MINI  
UPRIGHTS X2



GROUND  
PEGS x4

BUNGEE x4

CARRY BAG x1



## THANK YOU!

For choosing the QuickPlay Kickster Combo Goal. We hope you enjoy and get years of use out of this product.

If you have any issues, please do not return it to the store. Instead contact us directly:

[info@quickplaysport.com](mailto:info@quickplaysport.com)

We promise to resolve it or your money back.

At Quick Play Sport we think sport is all about taking part. We develop innovative products that help athletes and coaches at all levels of sport, perform to the best of their ability. If you have any queries or suggestions about how we can improve our products, we'd love to hear them. Please feel free to get in touch.

[info@quickplaysport.com](mailto:info@quickplaysport.com)

+44 (0) 114 247 2327

© 2020 Quick Play Sport Limited. All Rights Reserved. Designed in the UK and made in China to EU standards  
Quick Play Sport Ltd. 1 Longacre Close, Holbrook Industrial Est., Sheffield, S20 3FR UK