


QUICKPLAY

RIP SHOT FLEXI
LACROSSE GOAL

INSTRUCTIONS

GOAL SIZES: 6x6'

**SCAN FOR
SETUP VIDEO:**

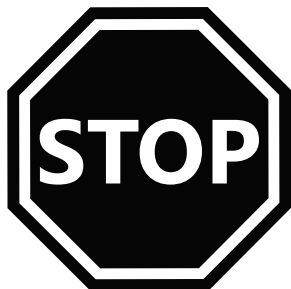


**GOT AN ISSUE?
DON'T RETURN
TO THE STORE**

please contact us instead:
support@quickplaysport.com

Scan for setup video:



1.

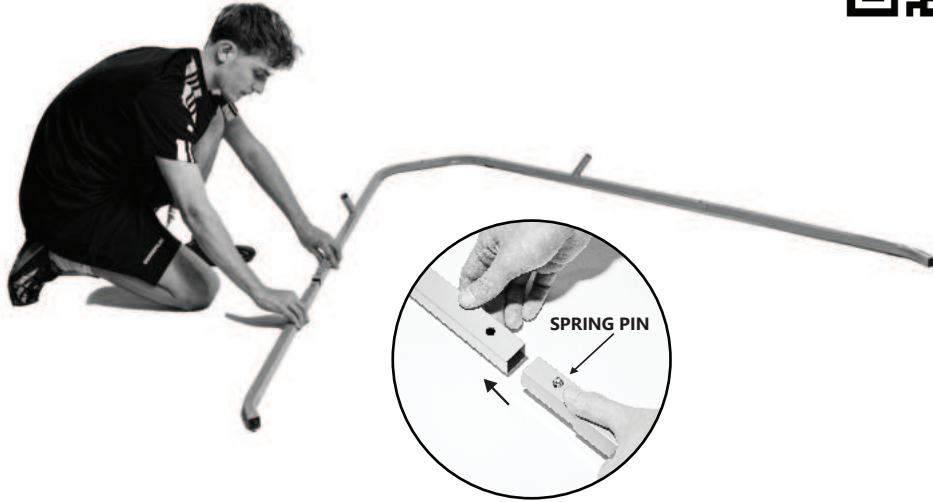


2.




3.



4.

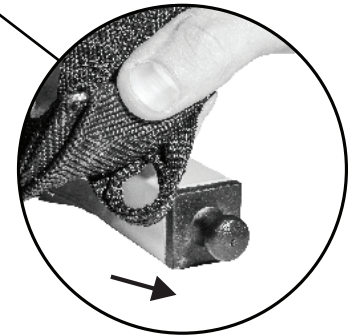

5.

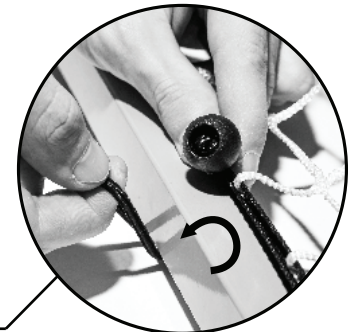

Rip Shot Flexi Lacrosse Goal is a portable product and is designed to be set up and taken down quickly and easily. It should not be left setup after use. To ensure maximum lifespan of your goal, please ensure to pack it away and store in the provided carry bag.

WARNINGS & USAGE GUIDELINES:

- 1. Must be assembled by an adult.**
- 2. Warning. Not suitable for children under 3 years. Long cord, strangulation hazard. Small parts, choking hazard.**
- 3. Only use on a flat surface.**
- 4. Check the product is fully assembled before use.**
- 5. Check the frame is secured to the ground before use.**
- 6. Disassemble after use. Do not leave outdoors in adverse weather conditions.**
- 7. Store in a cool, dry place. If the product gets wet after use, ensure that it is properly dried before storage.**
- 8. Do not climb or hang on the goal.**
- 9. Regularly check the goal for wear and tear. Stop using if any part of it breaks. Failure to do so may result in injury.**
- 10. Keep away from heat sources. Do not leave in a hot vehicle.**
- 11. Not suitable for use in high winds.**

1YR PARTS WARRANTY AS STANDARD:

Warranty covers manufacturing defects and workmanship, but excludes nets, bungees and general wear and tear. Please note, non-compliance with the above Warnings & Guidelines will invalidate your warranty. Register your warranty within 15 days of purchase & see full warranty terms at:

Warranty.QuickPlaySport.com

or scan this code:

