



QUICKPLAY®

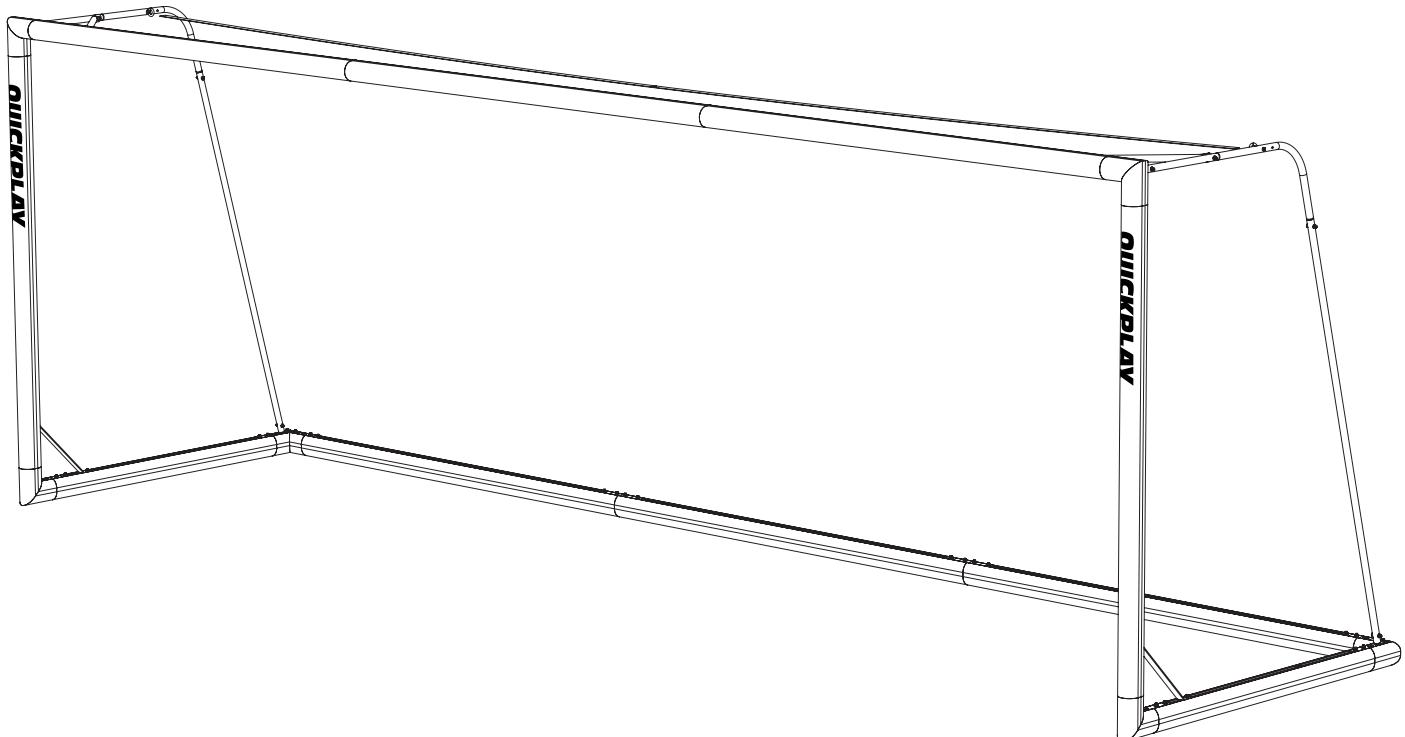


MATCH 110

24 x 8FT

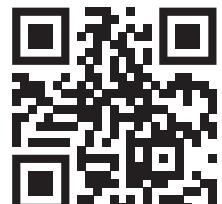

SCAN FOR
SETUP VIDEO

 PARTS LIST




110-A1
CROSSBAR & BASE BAR ENDS (4x)




110-A2
CROSSBAR & BASE BAR CENTRE (2x)



 
110-A3
UPRIGHTS (2x)




110-A4
SHORT BASE BARS (2x)

 


110-A7
CROSSBAR & BASE BAR INNER CONNECTOR (4x)

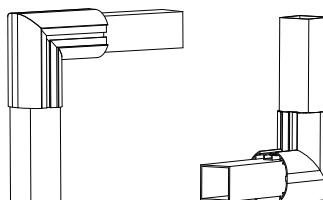


110-A5
CROSSBAR & BASE BAR
CORNER (4x)

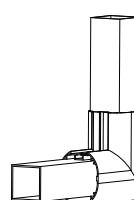

110-A6
CROSSBAR & BASE
CONNECTOR (2x)

 


110-A10
STANCHION
TOP (2x)

 


110-A8
STANCHION
CORNER (2x)




110-A9
STANCHION
DIAGONAL (2x)

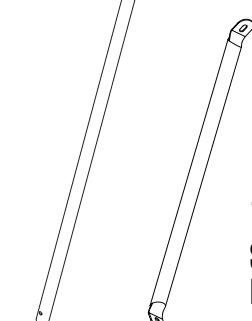


110-A11
STANCHION
BRACE (2x)

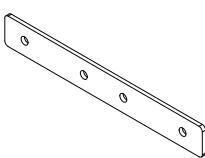


110-S1
STRAIGHT FLAT
CONNECTOR (4x)

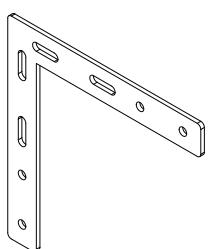


110-S2
CORNER FLAT
CONNECTOR (4x)

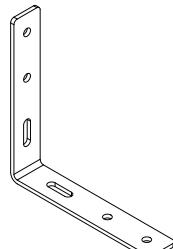


110-S3
CORNER 90°
CONNECTOR (2x)

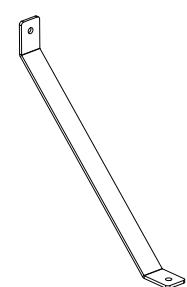


110-S4
CORNER ANGLED
CONNECTOR (2x)

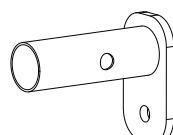


110-S5
STRAIGHT
SOCKET (2x)

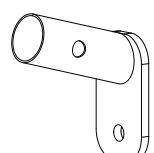


110-S6
ANGLED
SOCKET (2x)

 

A1
M10x30 (50x)

 


A3
M10x25 (4x)

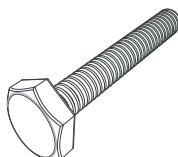

B1
M8x55 (8x)



 C1
M8x30 (16x)



NW-1
10MM NYLON
WASHER (54x)



NW-2
8MM NYLON
WASHER (8x)



 
A2
M10 (54x)




B2
M8 (8x)




NET
(1x)




NC-1
NET CLIPS (36x)

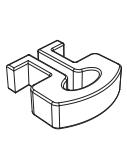


NC-2
LONG NET CLIPS (8x)

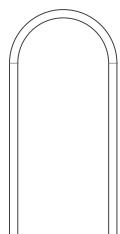

GP-1
GROUND PEGS (4x)

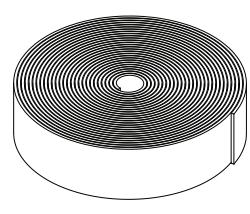


WEB-1
NET RETAINER (1x)

 


BUN-1
BUNGEE (2x)


TOOLS SUPPLIED

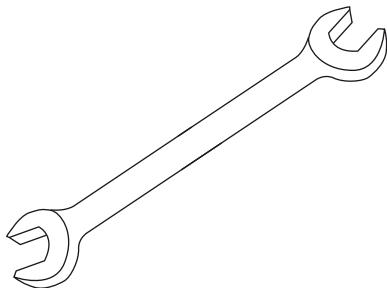

LARGE WRENCH

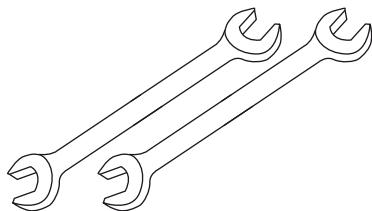

SMALL WRENCH (2x)

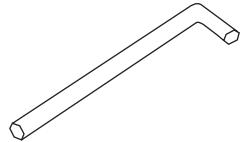

ALLEN KEY

WARNING INFORMATION

1. Read through the instruction manual thoroughly before assembling the goal.
2. Check parts for any defects prior to the assembly of the goal.
3. Only use the goal on a flat surface.
4. Ensure due diligence is carried out and a risk assessment followed prior to the assembly of the goal.
5. Safety/warning stickers must be visible at all times.
6. Goals must be anchored at all times.
7. Never climb on the net or the posts.
8. Ensure the goal is checked for any signs of damage prior to use.
9. Use extreme caution when moving the goal.
10. Remove nets when goals are not in use.

1 Year Manufacturer Warranty:

Register your 2 yr warranty within 15 days of purchase
visit: Warranty.QuickPlaySport.com or scan this code:

What your warranty covers?

Replacement parts within two years of your purchase date.

In accordance to the warranty guidelines above, failure to follow the methods of
disassemble, use and storage will void your two year manufacturer warranty.

Warranty exclusions

- Accidental damage
- Misuse and abuse of product
- Lost merchandise
- Failure to properly care for your product

This excludes products which are clearly marketed as all weather products which are
designed to be left outside assembled. Please read the website description for further
details.

Should you wish to make a warranty claim please contact customer service
with the required details. Please provide the following:


1. Order number
2. Name and full address details
3. Pictures of the fault with a brief description of the problem

Customer service details:

support@quickplaysport.com




Reference this page to ensure your frame's parts are in the correct place

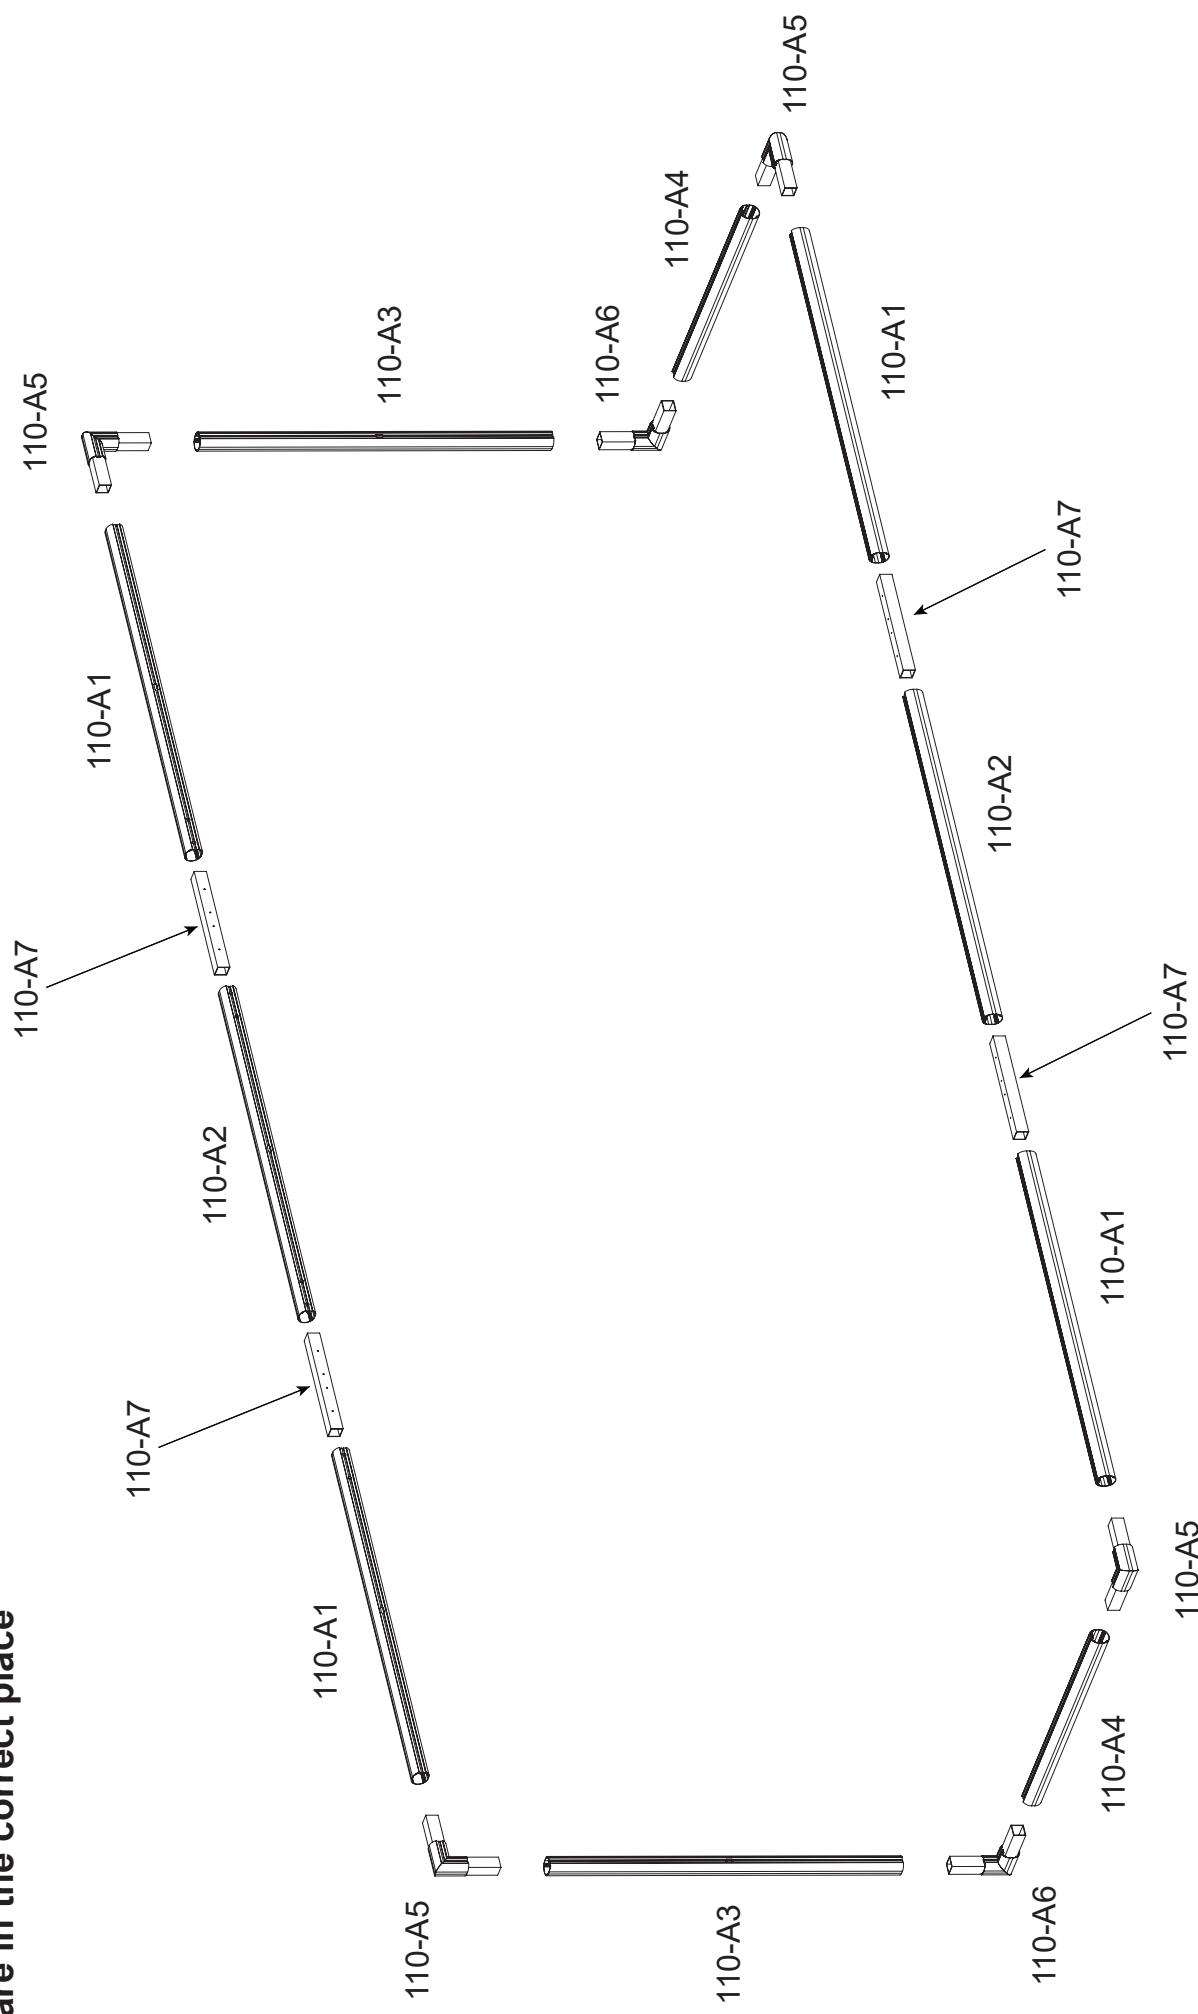

STEP 01 -

Lay the crossbar (110-A1, 110-A2), posts (110-A3), base bar (110-A1, 110-A2) corners (110-A5, 110-A6) and inner connector parts (110-A7) on the ground as the diagram shows.

110-A1

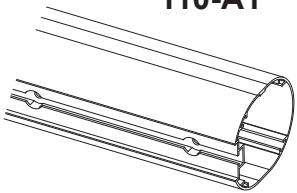


STEP 02.1 -


Slide 2x A1 bolts into the end of 110-A1.

Slide 2x A1 bolts into **each end** of 110-A2.

110-A7

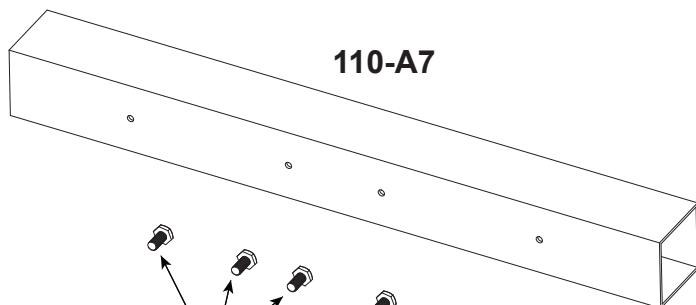

110-A2

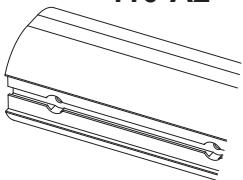

A1

A1

A1

A1

STEP 02.2 -

Ensure the bolts are positioned as shown.

Close 110-A1 & 110-A2 together, with 110-A7 stored inside

NOTE -

Ensure these bolts are separated by this hole.

110-A1

110-A7
(inside)

110-S1

NW-1

A2

C1

110-A2


STEP 02.3 -

Fasten 110-A1 & 110-A2 to 110-A7 using C1 bolts first.

Fasten bolts A1 into 110-S1 using NW-1 & A2

NOTE -
Each crossbar connection should look like this

110-A5

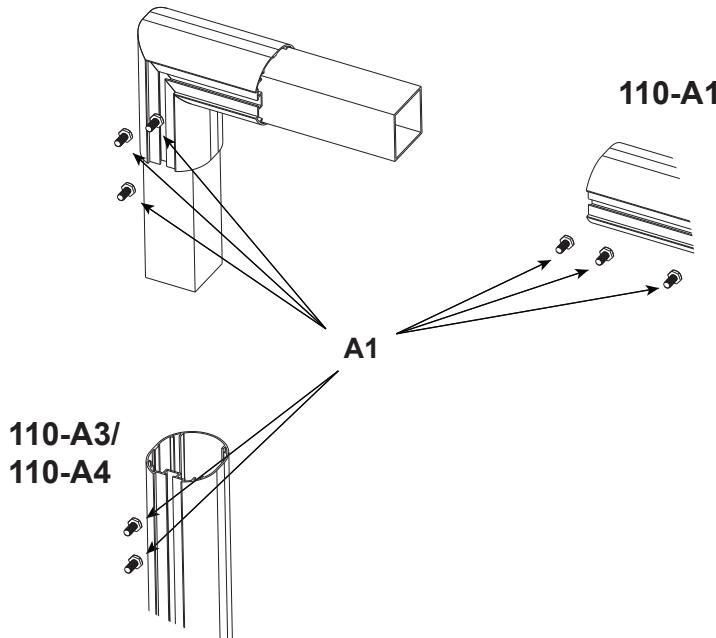

110-A1

110-A3/
110-A4

STEP 03.1 -

Slide 3x A1 bolts into the end of 110-A1

Slide 3x A1 bolts into the end of 110-A5.

For goalposts - Slide 2x A1 bolts into the end of 110-A3.


For base bar - Slide 2x A1 bolts into the end of 110-A3.

STEP 03.2 -


Ensure the bolts are positioned as shown.

For crossbar and goalposts - Close 110-A1, 110-A3 & 110-A5 together.

For base bar - Close 110-A1, 110-A3 & 110-A5 together.

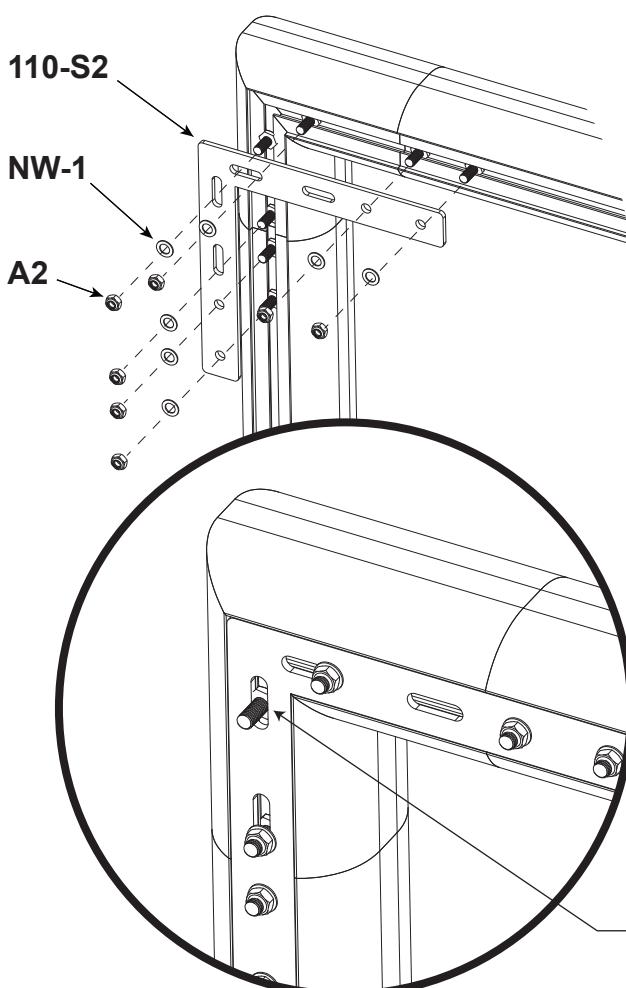

110-A5

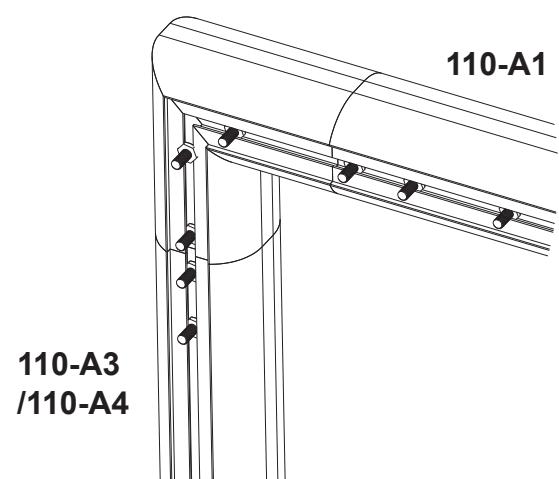

110-A1

110-A3
/110-A4

STEP 03.3 -


For the goal posts & crossbar - fasten 110-A1, 110-A3 & 110-A5 together using 110-S2

For the base bars - fasten 110-A1, 110-A4 & 110-A5 together using 110-S2

Fasten bolts A1 into 110-S2 using 8x NW-1 & 8x A2

Do not attach NW-1 or A2 to this A1 bolt on all corners at this point


THE CROSSBAR & POSTS SHOULD NOW BE ASSEMBLED AS SHOULD THE BASE BAR.
THESE ASSEMBLED PARTS NEED TO BE CONNECTED TOGETHER.

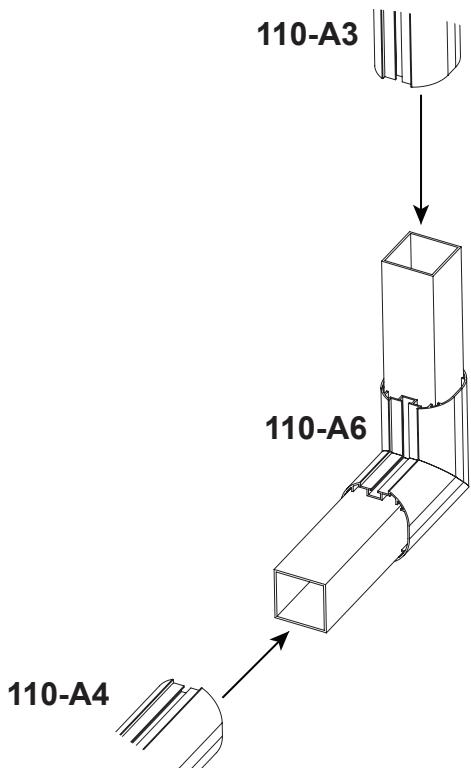

STEP 04.1 -

With the base bar assembly laid on the ground, slot 110-A6 into the two ends of the base bar assembly

Then lift the goal post assembly upright and slot onto the other end of 110-A6


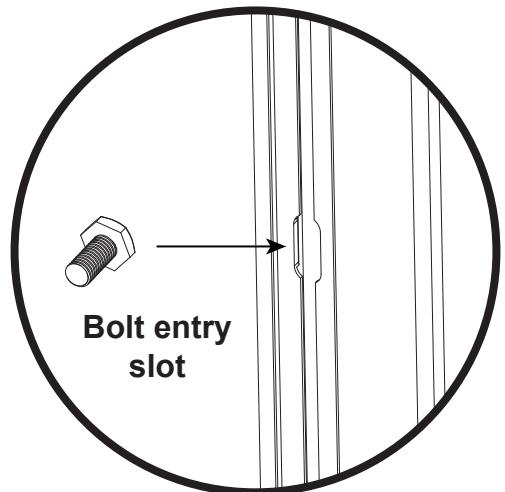


STEP 04.2 -

Slide 3x A1 into the bolt entry slot of 110-A3 & 3x A1 into the bolt entry slot of 110-A4

Secure 110-A3, 110-A4 & 110-A6 together using 110-S3 & 110-S4



Fasten bolts A1 into S3 & S4 using 6x NW-1 & 6x A2

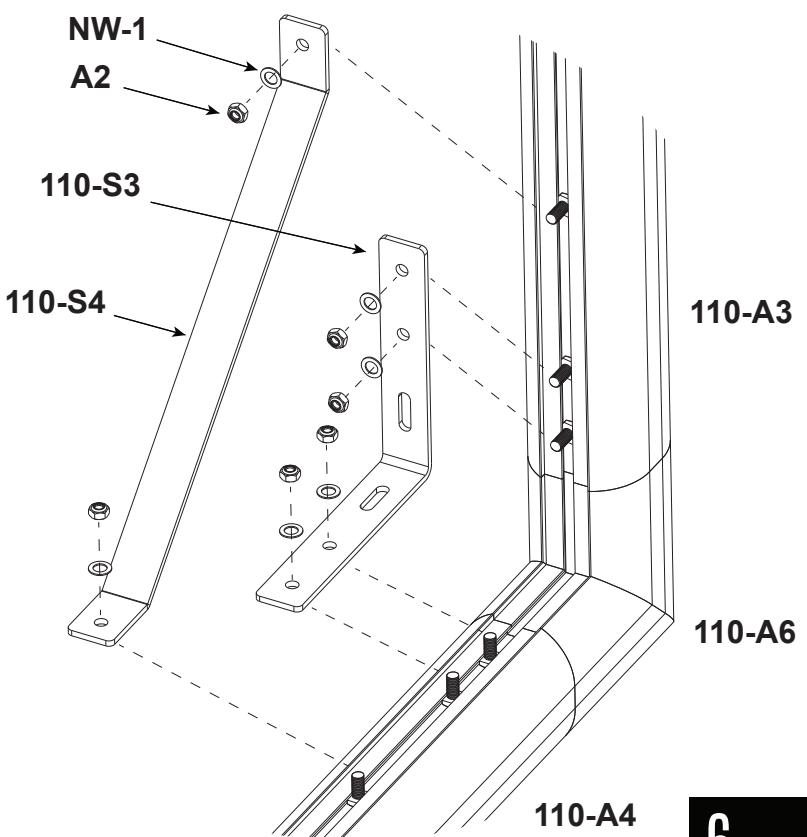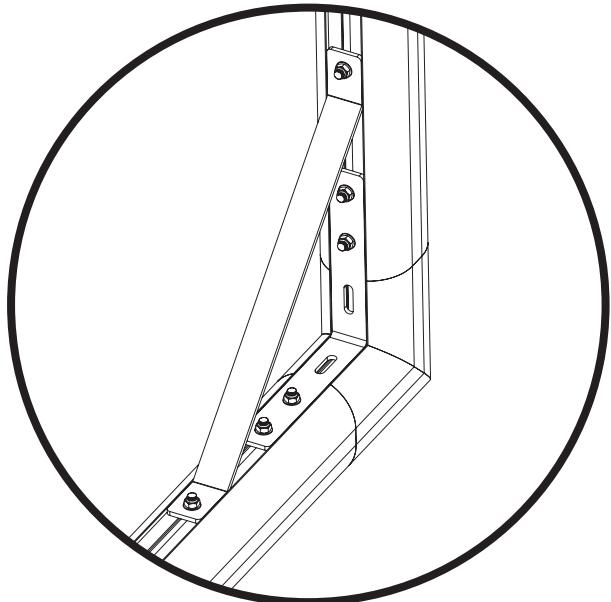

STEP 05.1 -

LOOSELY fasten 110-S5 to the TOP CORNERS of the goal frame, using the unused A3 bolt (shown on page 5), NW-1 & A2

LOOSELY fasten 110-S6 three quarters the way up the post below 110-S5 of the goal frame, using the unused A3 bolt (shown on page 5), NW-1 & A2

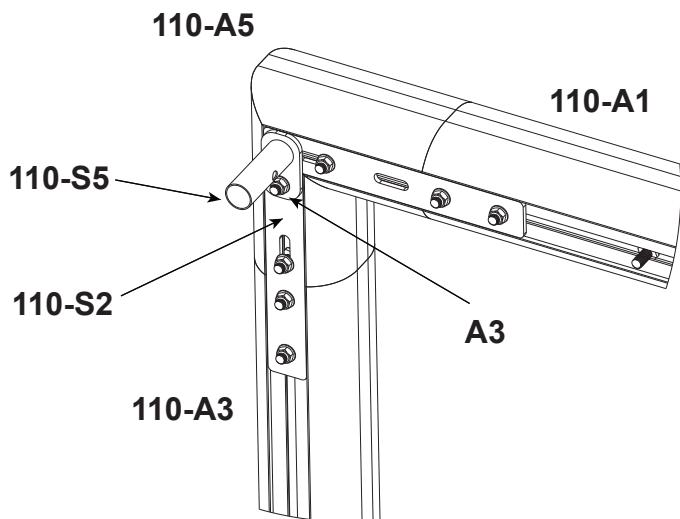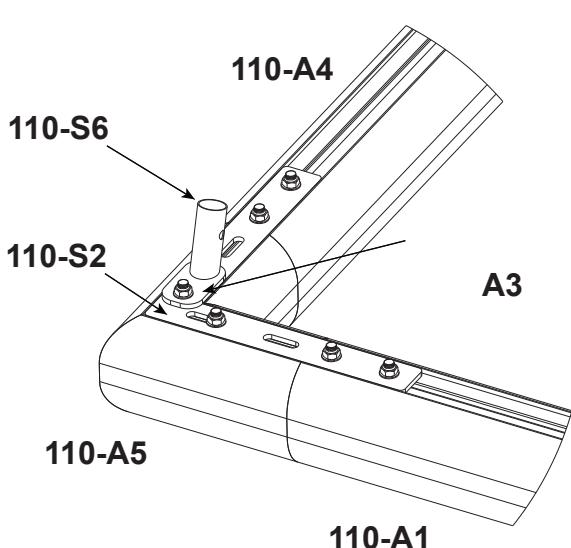


STEP 05.2 -

LOOSELY connect 110-A10, 110-A8 & 110-A9 together. Connect 110-A7 onto 110-S5 & 110-A9 onto 110-S6.

Connect 110-A11 to 110-A8 using B1, NW-2 & B2. Connect 110-A11 to 110-A1 using A1, NW-1 & A2.

Fully tighten all LOOSELY CONNECTED bolts once the stanchions are fully assembled onto the frame.


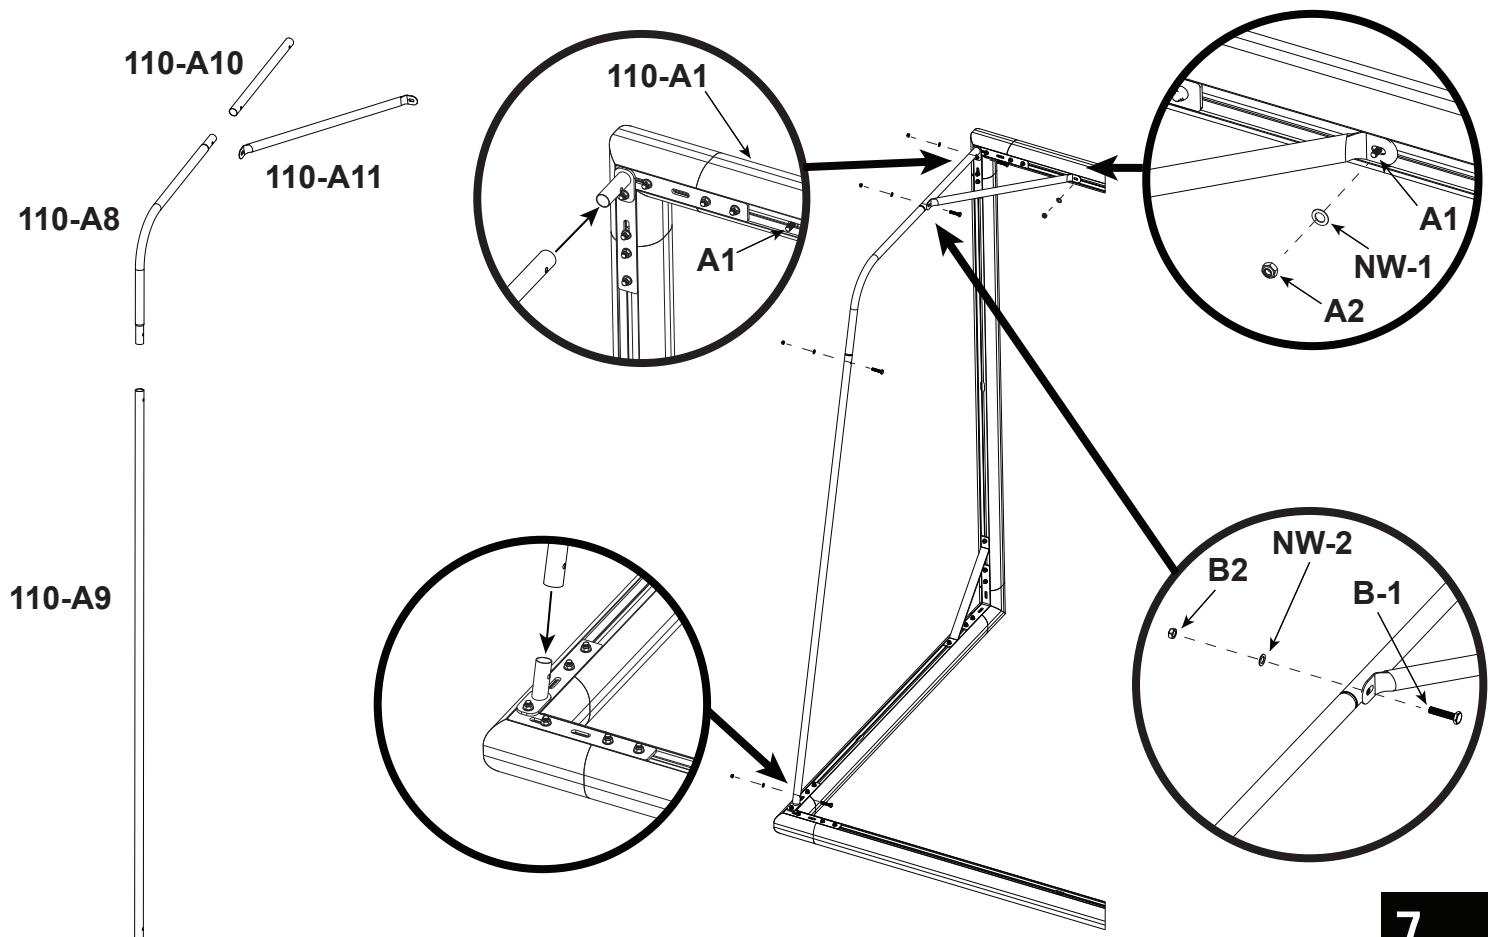


**THE GOAL FRAME SHOULD NOW BE FULLY ASSEMBLED
& ALL FASTENERS FULLY TIGHTENED**

STEP 06.1 -

Feed BUN-1 through one end of WEB-1
& secure it around the top of the stanchions,
shown below



Do the same to the other end of WEB-1

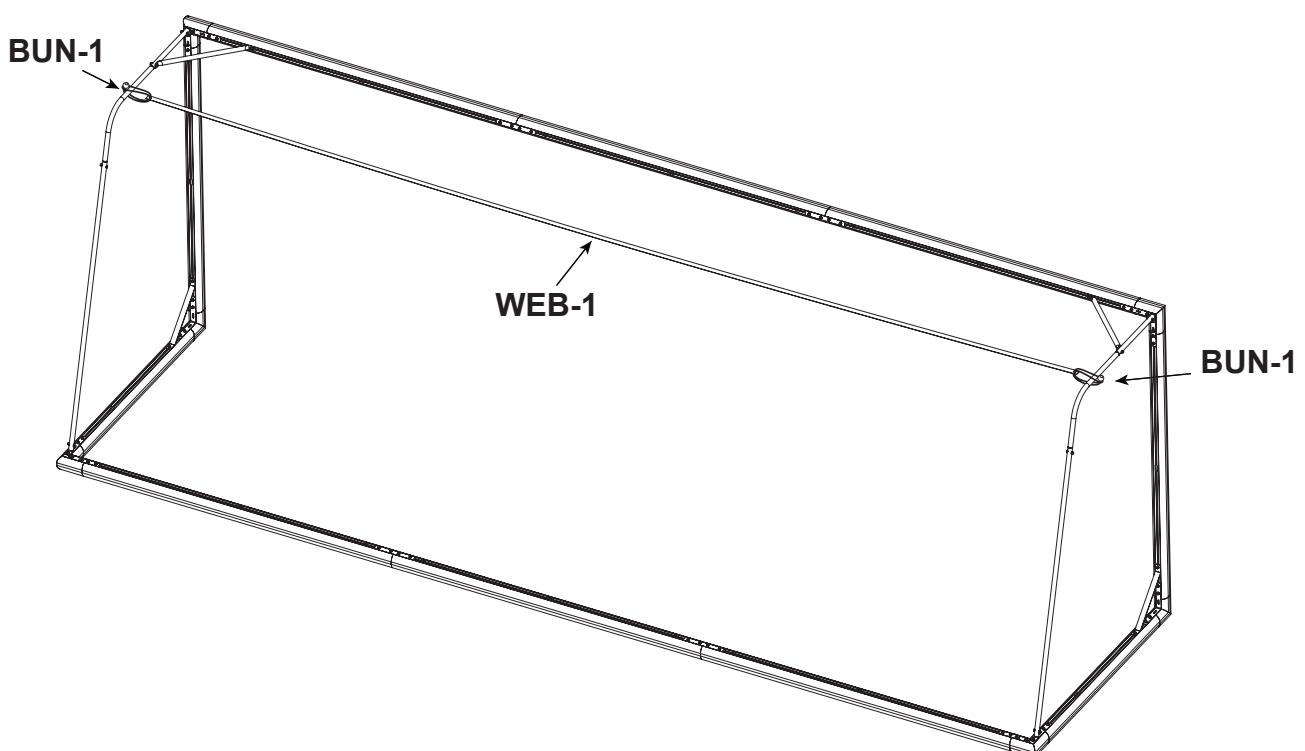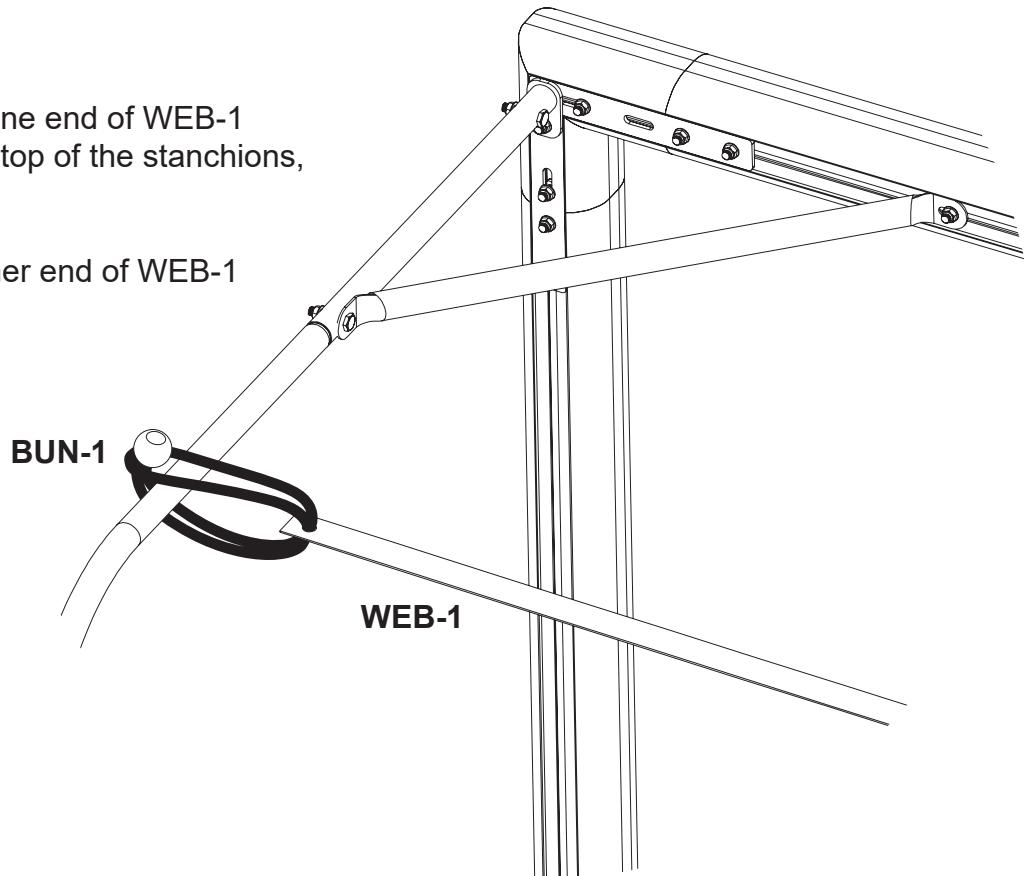

STEP 07.1 -

Identify the 'TOP CORNER' tags on the net.

Throw the net over the assembled goal frame ensuring the TOP CORNER tags are positioned in the top corners of the frame

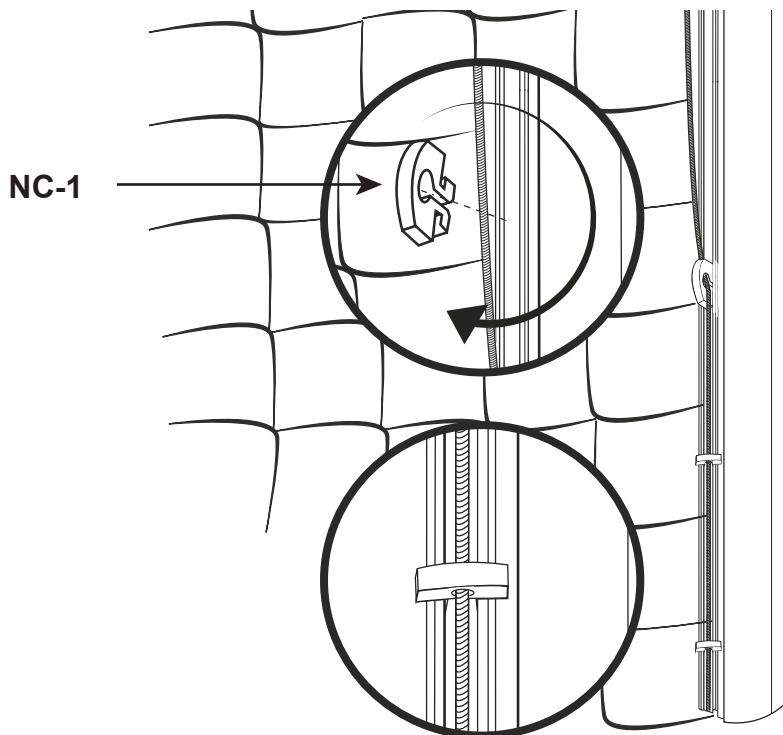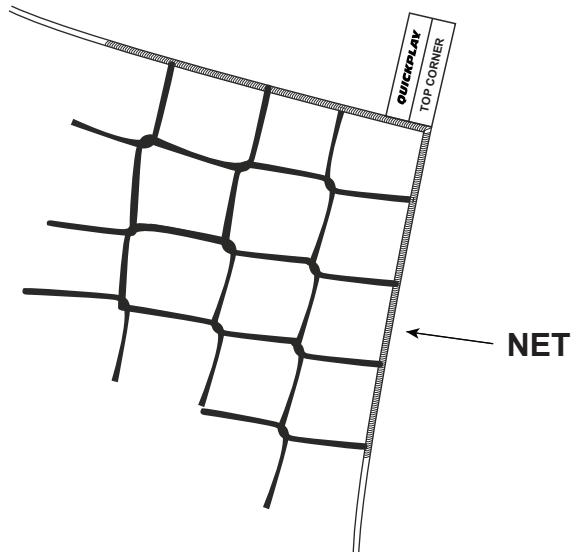


STEP 07.2 -

Insert the thick perimeter trim of the net into the mouth of the net clips.

Secure the net to the rear of the assembled frame using NC-1.

Use NC-2 when securing the net into the corner brackets (110-S2 & 110-S3).

Push & twist the net clips into the frame as shown in the diagram to the left.

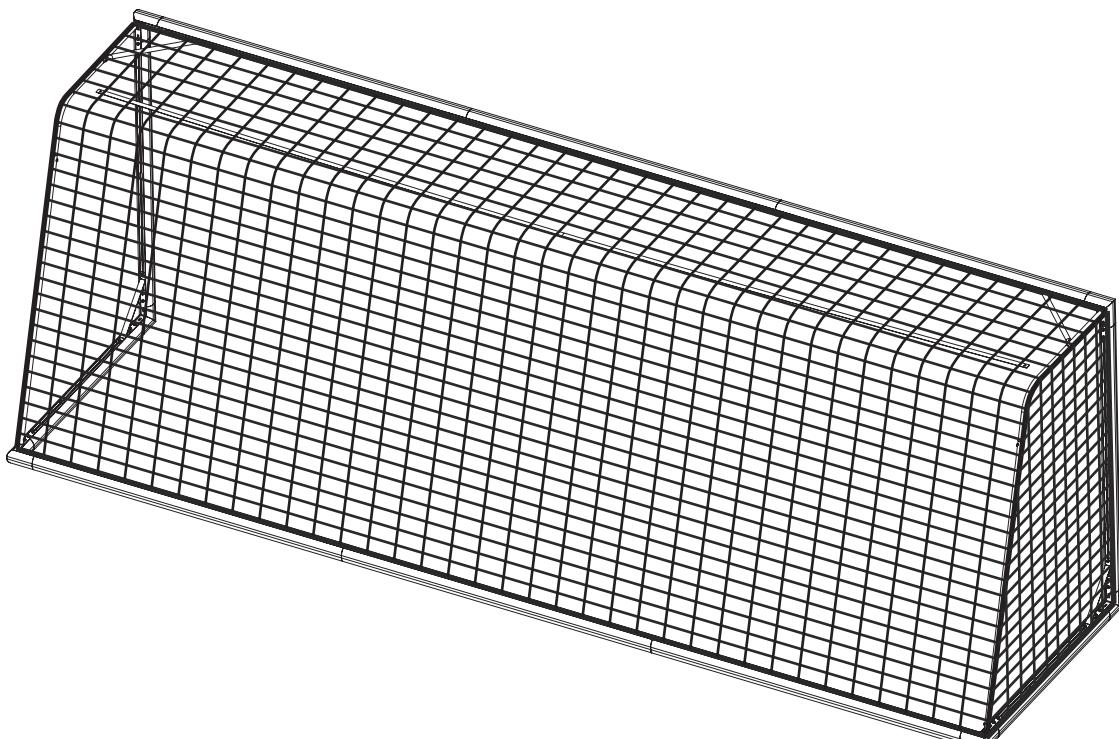

ASSEMBLY COMPLETE

THANK YOU!

For choosing the QUICKPLAY MATCH 110 SOCCER GOAL.

We hope you enjoy and get
years of use out of this product.

If you have any issues, please do not
return it to the store. instead, contact us
directly:

support@quickplaysport.com

We promise to resolve it
or your money back.

At QUICKPLAY we think sport is all about taking part.
We develop innovative products that help athletes and
coaches at all levels of sport, perform to the best
of their ability.

If you have any queries or suggestions about how we can
improve our products, we'd love to hear them. Please feel
free to get in touch.

© 2024 QUICKPLAY Sport Limited. All Rights Reserved.
Designed in the UK and USA. Made in China to EU
standards.