 
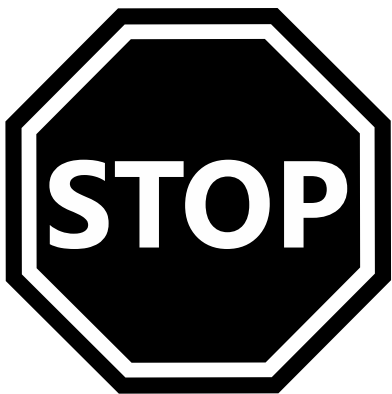 


QUICKPLAY

PORTABLE TEAM SHELTER

Instructions

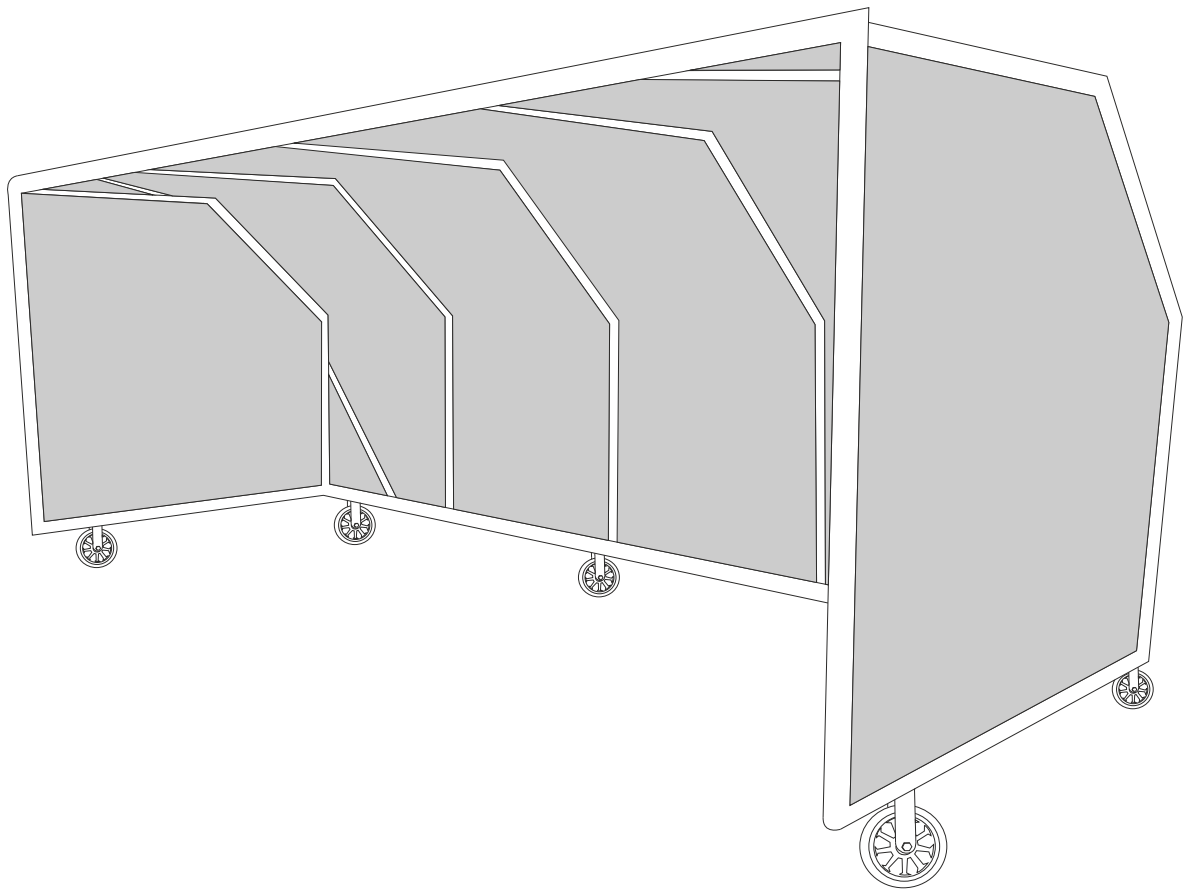

**GOT AN ISSUE?
DON'T RETURN
TO THE STORE**

please contact us instead:
support@quickplaysport.com

PARTS LIST



 
CS-1
Uprights and Side Bars (4x)



CS-2
Crossbar and Basebar Left + Rights (4x)




CS-3
Crossbar and Basebar Centres (2x)



CLU-1
Straight Connector (4x)




 CLU-2
Straight Bracket (4x)

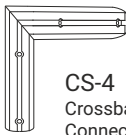


CS-4
Crossbar + Basebar Corner Connectors (4x)

 CS-5
Upright/Side Bar Corner Connectors (2x)



 
CS-6
Top + Bottom Back End Supports (4x)




CS-7
Middle Back Supports (5x)



 
CS-8
Top + Bottom Back Middle Supports (6x)




CS-9
Corner Back Supports (4x)

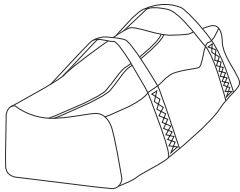 

SANDBAG
For 25kg of sand (4x)

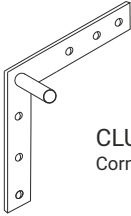 


CLU-3
Corner Brackets (4x)

 


CLU-4
L-Shaped Brackets (2x)



 
CLU-6
Support Brackets (6x)




CLU-5
U-Brackets (5x)

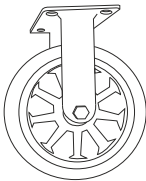 


WHEEL-1
Wheels (No Brake, 2x)

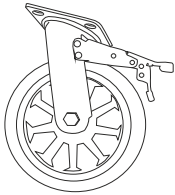 

WHEEL-2
Wheels (With Brake, 3x)

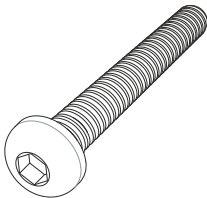 


A1
M10 Long (4x)

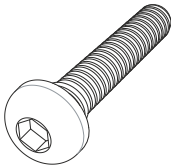 


B1
M10 Short (20x)



 
C1
M8 (26x)

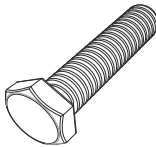

D1
M10 (66x)

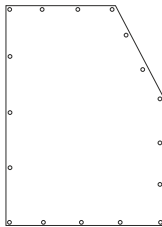 

Side Cover
For ends of Shelter (2x)

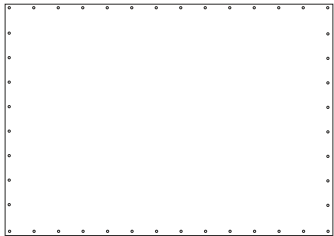 

Center Cover
Back and Top of Shelter (1x)



A2
Hex Bolt (90x)



NW-1
Nylon Washers 10mm (90x)

 
 


NW-2
Nylon Washers 8mm (26x)




BUNGEE (82x)

TOOLS INCLUDED

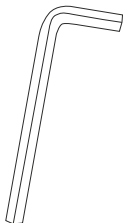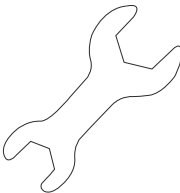

PRODUCT ASSEMBLY

 Figure 1.

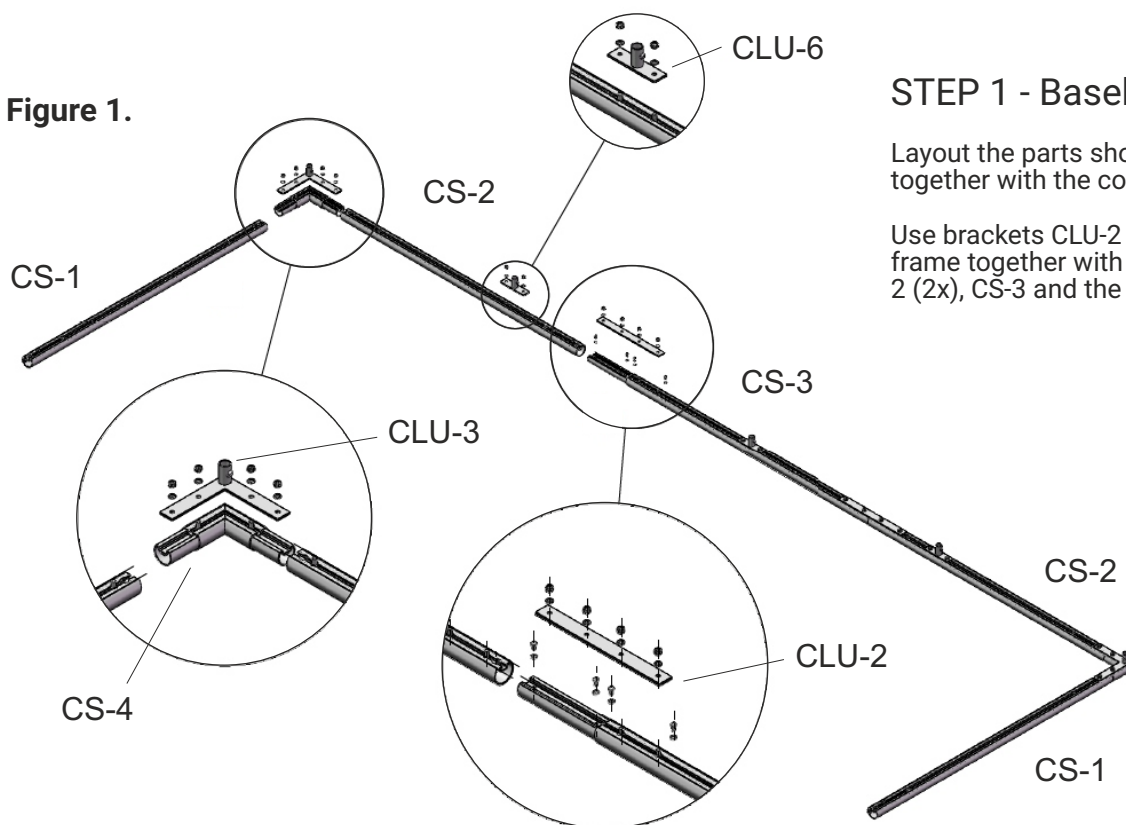

STEP 1 - Basebar (**Figure 1**)

Layout the parts shown in the diagram and fix together with the connecting parts.

Use brackets CLU-2 and CLU-3 to attach the base frame together with connecting poles CS-1 (2x), CS-2 (2x), CS-3 and the corner CS-4 parts.

STEP 2 - Uprights (**Figure 2**)

Attach the uprights posts (CS-1) using the corner parts (CS-5) and the brackets (CLU-4) on either side of the base frame. Use

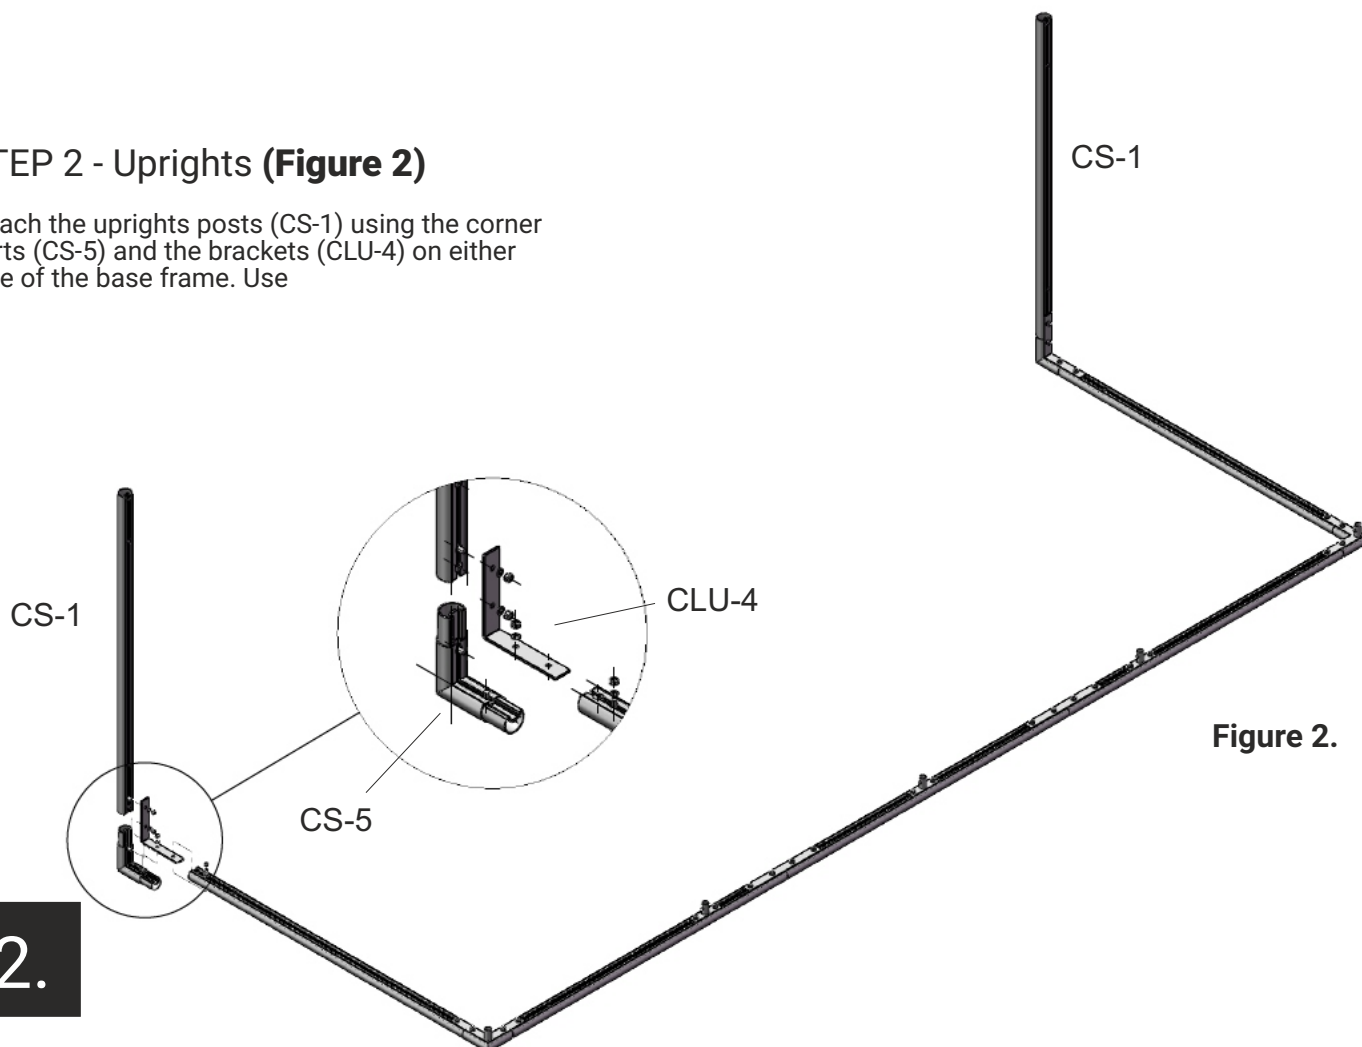


Figure 2.

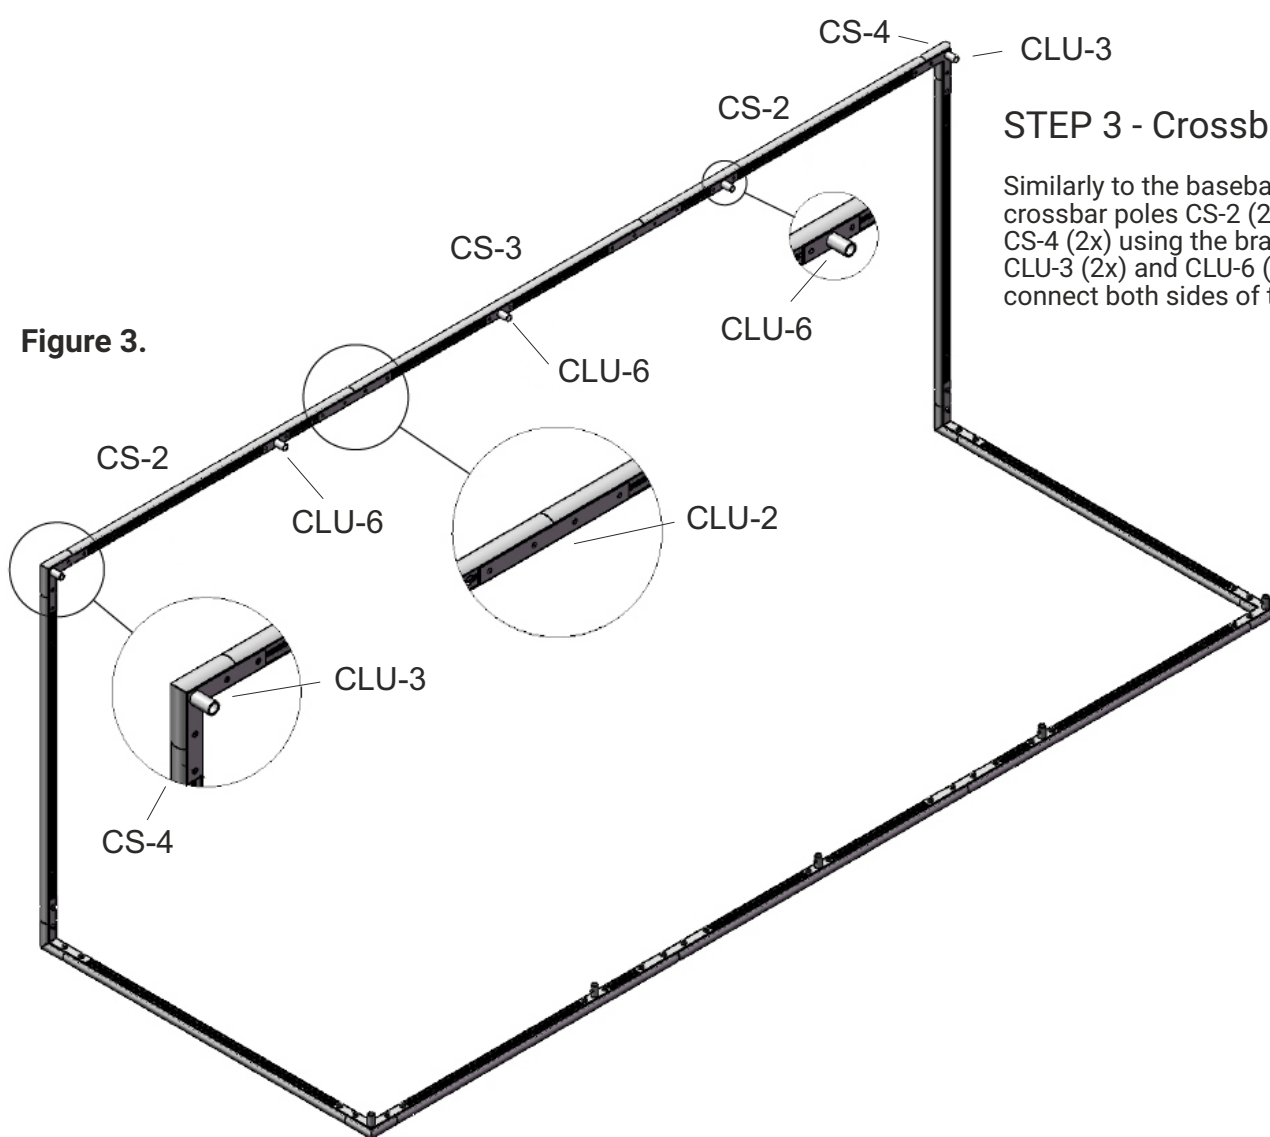


Figure 3.

STEP 3 - Crossbar (Figure 3)

Similarly to the basebar, attach the crossbar poles CS-2 (2x), CS-3 (1x) and CS-4 (2x) using the brackets CLU-2 (2x), CLU-3 (2x) and CLU-6 (3x). Do this to connect both sides of the uprights.

STEP 4 - Back Supports (Figure 4)

Attach a CS-6 pole into the corner bracket on the crossbar and the basebar on either end of the frame. Then connect the CS-6 parts with a CS-7.

The inner supports need a CS-8 to be connected to the brackets on the crossbar and basebar with a CS-7 connecting the 2 poles. (Please see figure 4).

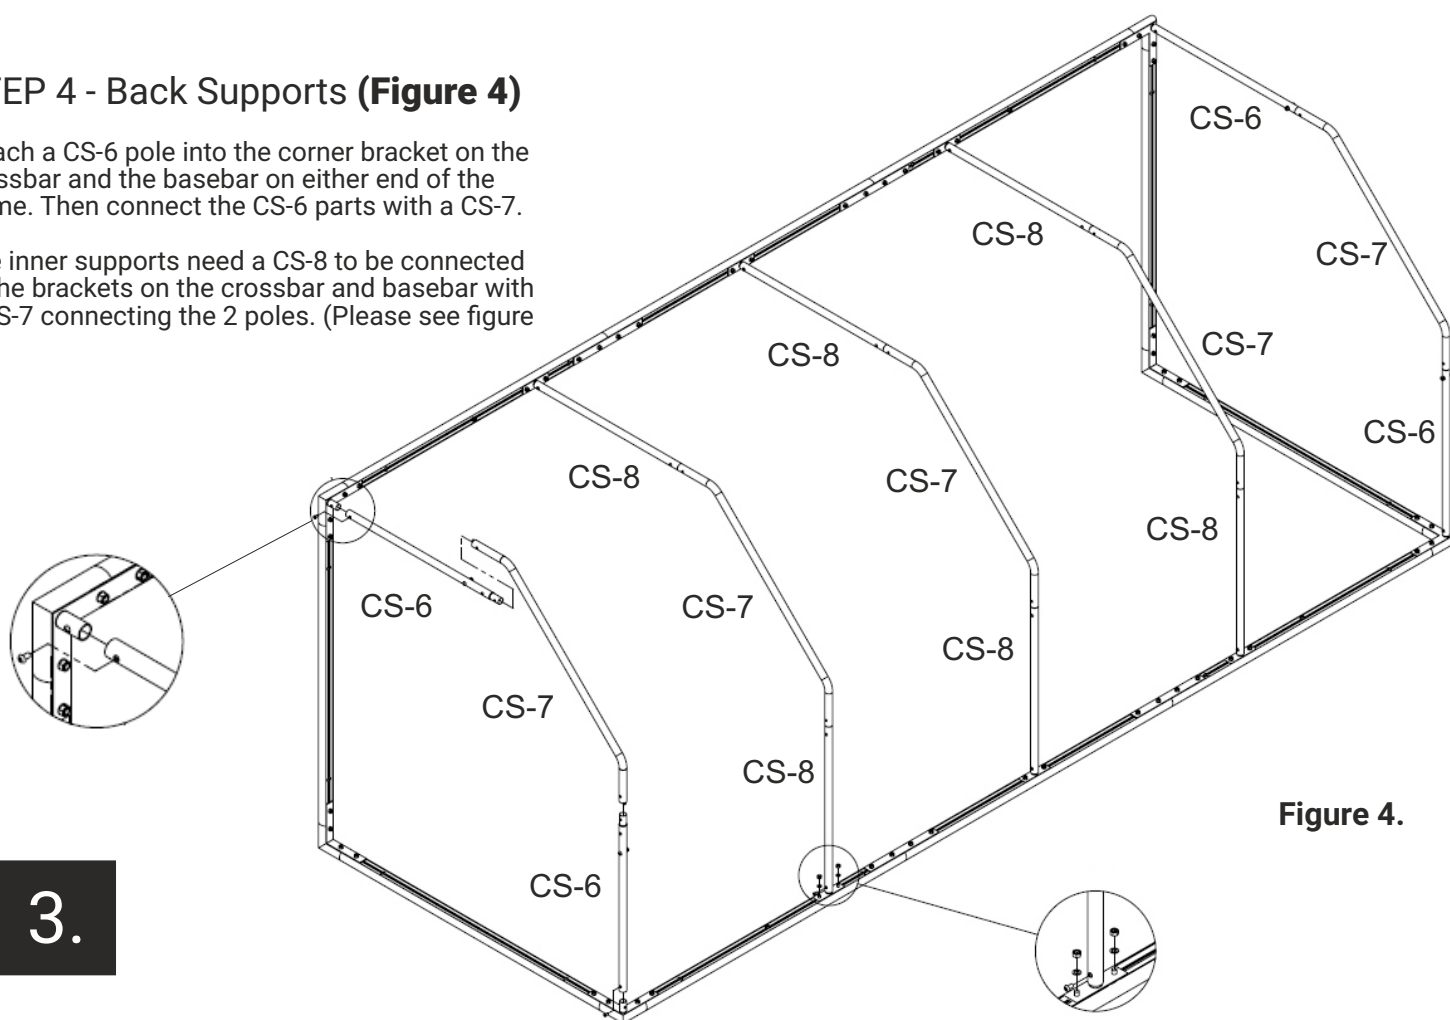


Figure 4.


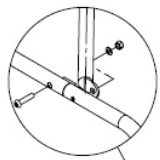


Figure 5.

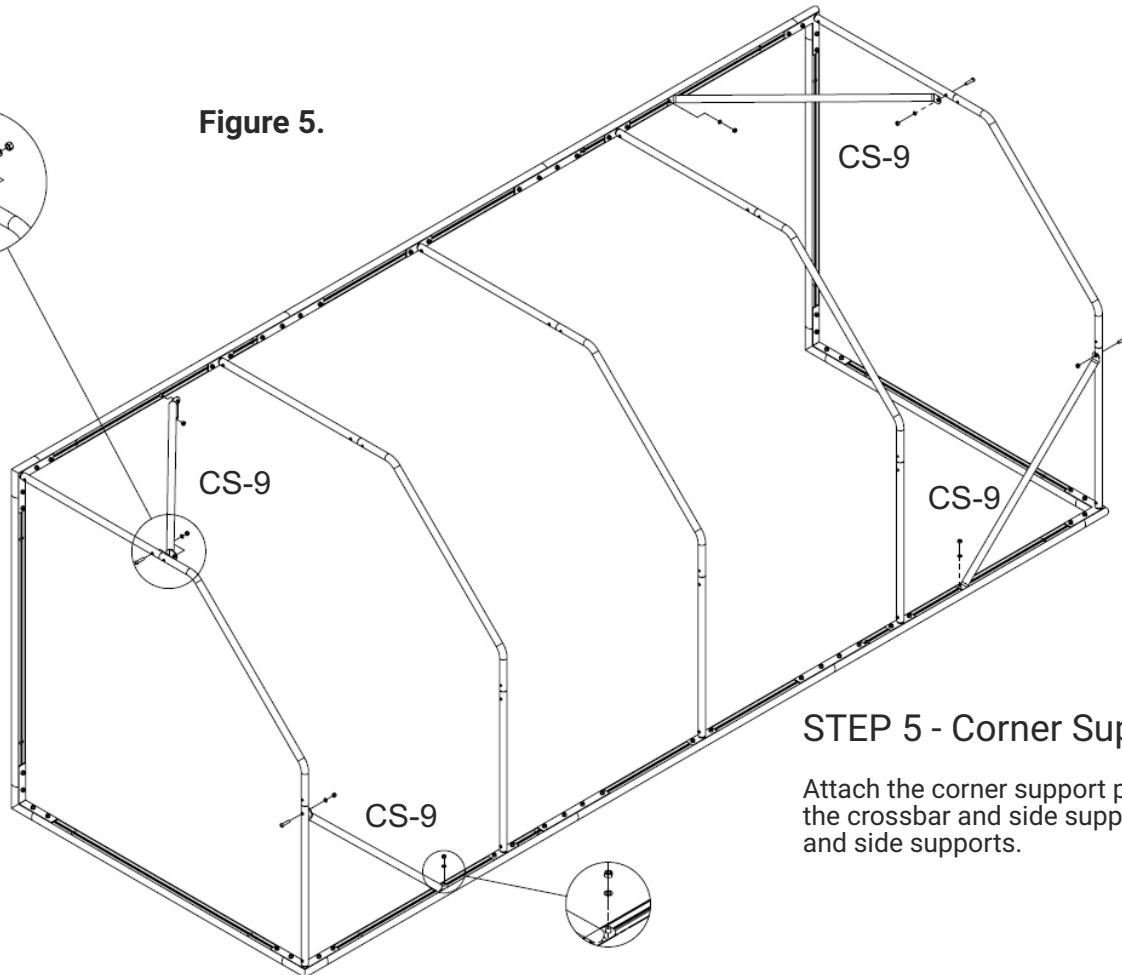

STEP 5 - Corner Supports (**Figure 5**)

Attach the corner support poles (CS-9) between the crossbar and side supports and the basebar and side supports.

STEP 6 - Wheels (**Figure 6**)

Attach the wheels underneath the base frame. Fix the wheels without brakes to the front underneath either side of the frame towards the crossbar.

Then fix the 3x wheels with brakes along the back basebar as shown in figure 6.




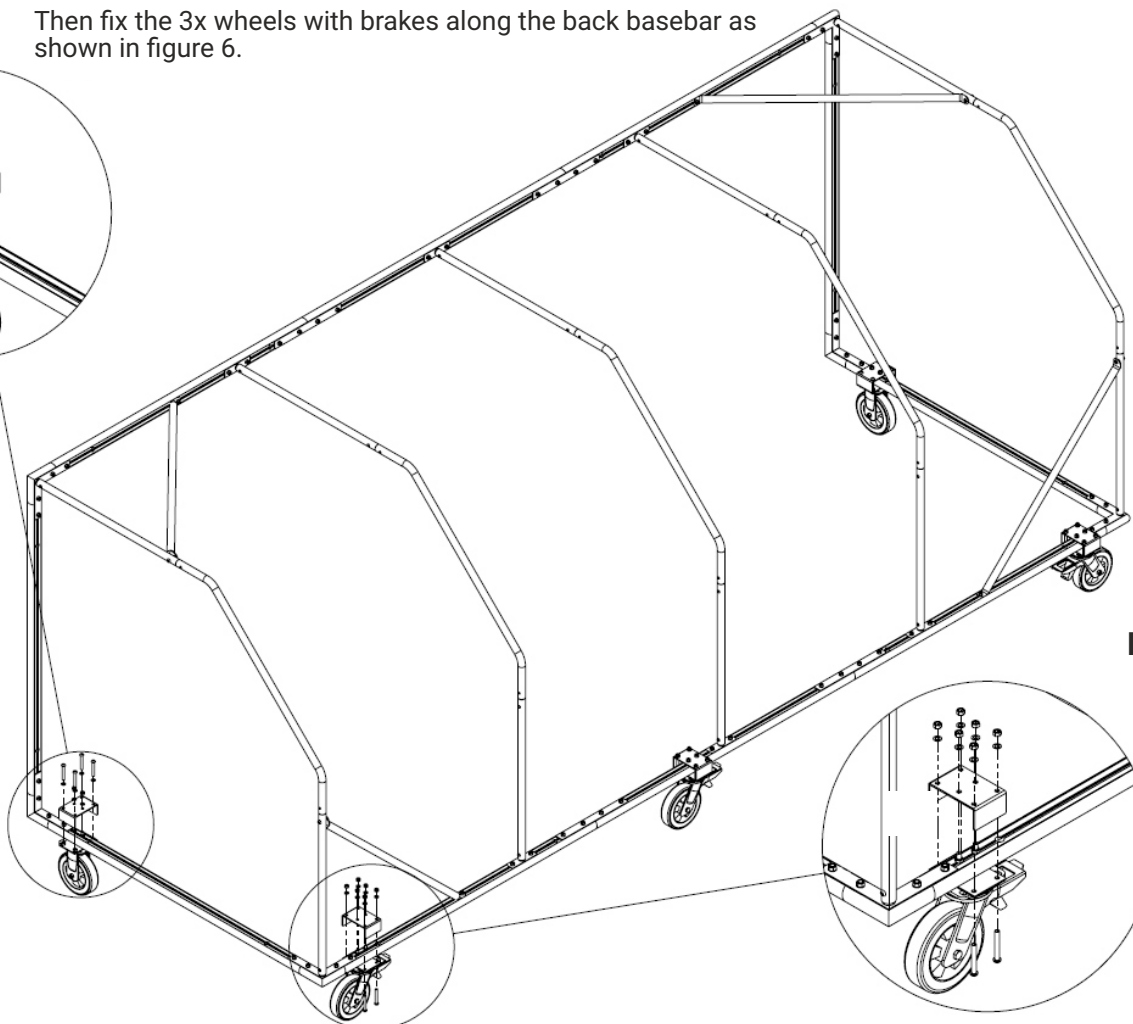


Figure 6.

STEP 7 - Sandbags (Figure 7)

Layout the sandbags underneath the frame, 1x on each side and 2 evenly along the back basebar. Then clip the straps over the top of the basebars of the frame.

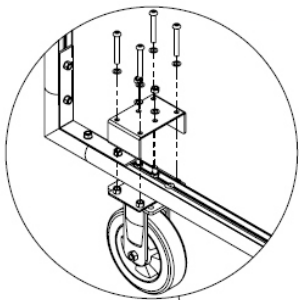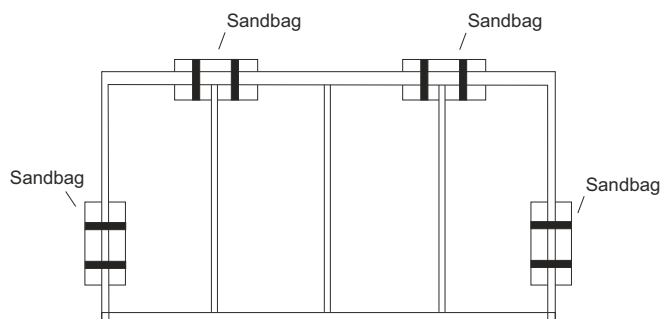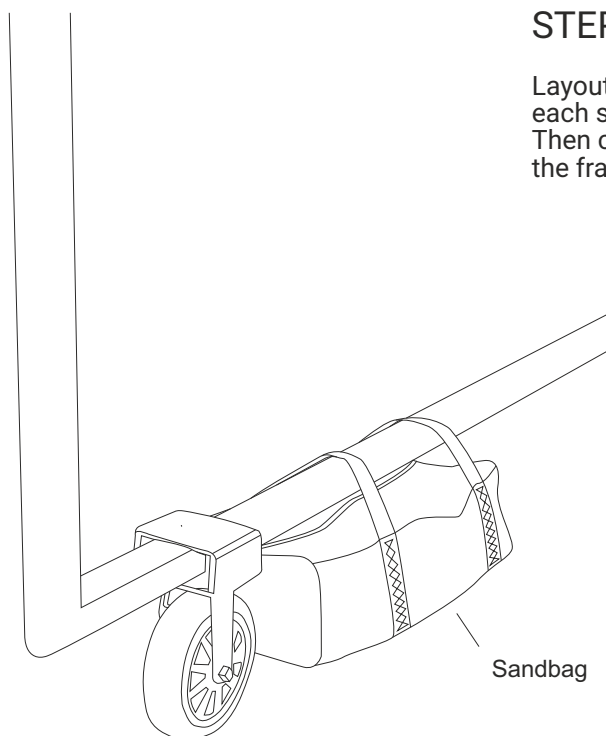

THANK YOU!

For choosing the **QUICKPLAY PRO ALU CLUB SHELTER**.
We hope you enjoy and get years of use out of this product.

WARNINGS & USAGE GUIDELINES:

1. Must be assembled by an adult.
2. This product is not suitable for children under 5 yrs of age.
3. Only use on a flat surface.
4. Check the product is fully assembled before use.
5. Always exercise caution when moving the product.
6. Ensure the product is secured to the ground with the provided sandbags provided before use.
7. Anchor with sandbags when in use.
8. Do not climb or hang on the product.
9. Regularly check the product for wear and tear. Stop using if any part of it breaks. Failure to do so may result in injury.
10. Not suitable for use in high winds.

1YEAR PARTS WARRANTY AS STANDARD:

Warranty covers manufacturing defects and workmanship, but excludes nets, bungees, weather wear (e.g rust / rot) and general wear and tear. Please note, non-compliance with the above Warnings & Guidelines will invalidate your warranty. Register your warranty within 15 days of purchase & see full warranty terms at:

Warranty.QuickPlaySport.com

or scan this code:

