

THANK YOU!

For choosing the QUICKPLAY RHINO GOAL.

We hope you enjoy and get years of use out of this product.

If you have any issues, please do not return it to the store. instead, contact us directly:

support@quickplaysport.com

We promise to resolve it
or your money back.

At QUICKPLAY we think sport is all about taking part. We develop innovative products that help athletes and coaches at all levels of sport, perform to the best of their ability. If you have any queries or suggestions about how we can improve our products, we'd love to hear them. Please feel free to get in touch.

© 2024 QUICKPLAY Sport Limited. All Rights Reserved. Designed in the UK and USA. Made in China to EU standards.

@quickplay_sport / @quickplay_soccer
www.quickplaysport.com / www.quickplaysport.us
Customer service: support@quickplaysport.com

QUICKPLAY®



RHINO GOAL

5 X 3FT & 4 X 2.5FT



**SCAN FOR
SETUP VIDEO**



PARTS LIST

WARNING INFORMATION



1. Read through the instruction manual thoroughly before assembling the goal.
2. Check parts for any defects prior to the assembly of the goal.
3. Only use the goal on a flat surface.
4. Ensure due diligence is carried out and a risk assessment followed prior to the assembly of the goal.
5. Safety/warning stickers must be visible at all times.
6. Goals must be anchored at all times.
7. Never climb on the net or the posts.
8. Ensure the goal is checked for any signs of damage prior to use.
9. Use extreme caution when moving the goal.

1 Year Manufacturer Warranty:

Register your 2 yr warranty within 15 days of purchase visit: Warranty.QuickPlaySport.com or scan this code:

What your warranty covers?

Replacement parts within two years of your purchase date.

In accordance to the warranty guidelines above, failure to follow the methods of disassemble, use and storage will void your two year manufacturer warranty.

Warranty exclusions

- Accidental damage
- Misuse and abuse of product
- Lost merchandise
- Failure to properly care for your product

This excludes products which are clearly marketed as all weather products which are designed to be left outside assembled. Please read the website description for further details.

Should you wish to make a warranty claim please contact customer service with the required details. Please provide the following:

1. Order number
2. Name and full address details
3. Pictures of the fault with a brief description of the problem

Customer service details:

support@quickplaysport.com

Upgrade to 2 years warranty by registering at:
warranty.quickplaysport.com





SETTING UP

SETUP VIDEO

CLOSE

Pull the pull-cord up towards the sky to release the goal frame locking mechanisms, then lower the posts and crossbar to the base bar. The goal frame will lock into position.



OPEN

Pull the pull-cord up towards the sky to release the goal frame locking mechanisms, then lightly push the base bar towards the ground.



5.

DO NOT FORCE THE GOAL OPEN, AS THIS MAY RESULT IN DAMAGE TO THE LOCKING MECHANISM OR FRAME!



SETUP VIDEO

INITIAL GOAL ASSEMBLY

1. Attach the base bar and crossbar connectors onto the frame corner sections using spring clips



2. Stand on the side of the frame with the 2x pull cords
Pull the 2x cords away from the frame to dislodge the locking mechanism, this will open the goal




2.



INITIAL GOAL ASSEMBLY

- 3.** Wrap the end of the net **without slots** underneath the base bar (side without the cords).
Zip the net on the base bar, ensure the green zip is on top of the base bar

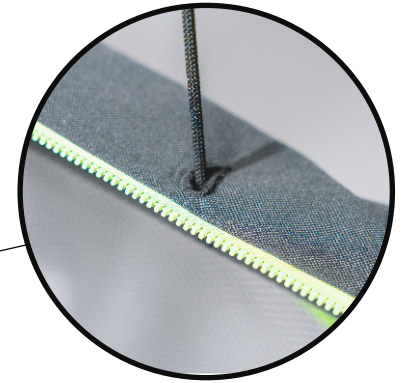

- 4.** Wrap the other end of the net **with slots** underneath and over the front of the crossbar.
Pull the cords through the net slots

- 5.** Zip the net to the crossbar



- 6.** Thread the green pull cord through the loop of the other cord and use the velcro to secure



- 7.** Hook the plastic net clips onto the bolts protruding from the hinges
Do this on both sides

