
REPLAY STATION XL SET UP:

**INSTRUCTION MANUAL** 

 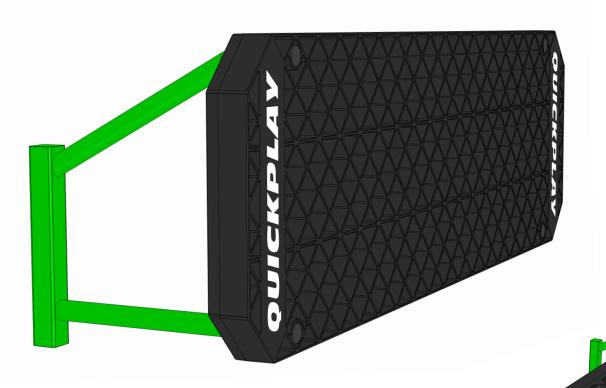


2. FILL SANDBAG
AND PLACE BEHIND
REBOUNDER

3. PLACE SANDBAG CLOSE TO THE BACK OF THE REBOUNDER TO I NCREASE STABILITY(SEE BELOW)

1. CONNECT STEEL

# - The QuickPlay Team



info@quickplaysport.com


### **RANDOM PASS RETURN**

4. INSERT STEEL FRAME TO THE OPPOSITE SIDE OF THE REBOUND BOARD FOR A UNPREDICTABLE PASS RETURN


**QUICKPLAY** 

© 2022 Quick Play Sport Limited. All Rights Reserved

## **QUICKPLAY**

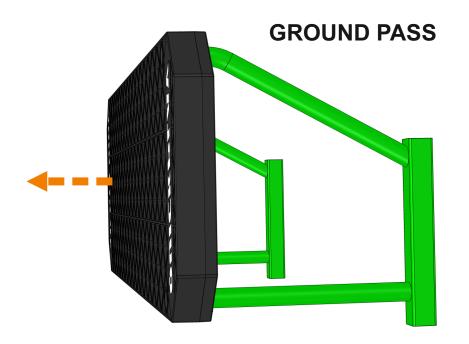



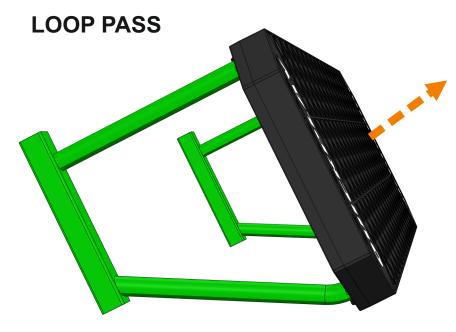

#### **WARNINGS**

- 1. Must be assembled by an adult.
- 2. To be used on a flat surface.
- 3. Check the frame is fully assembled and secured to the rebounder before use.
- Disassemble after use. Do not leave outdoors in adverse weather conditions.
- 6. Do not climb or hang on the structure. Regularly check for wear and tear. Stop using if any part of it breaks. Failure to do this may result in injury.
- 7. Keep away from heat sources.
- 8. This product is not suitable for children under 3 years of age.
- 9. Not suitable for use in high winds.

**PARTS WARRANTY:** This product must be disassembled after use and stored in a dry place or the warranty is no longer valid.

# - THANK YOU -

We'd like to thank you for choosing our Replay Station XL. We hope you enjoy and get years of use out of this product.

In the rare chance that you have any issues with the product, please do not return it to the place of purchase and instead contact us directly at info@quickplaysport.com so that we might assist you.